

The following steps will demonstrate the easiest installation method while ensuring optimal thermal performance for your project.

This guide shows how Foilboard panels are installed against a concrete or blockwork wall with a dual reflective airspace, using a furring channel and clip system.

ACCESSORIES




Foilboard Green Joining Tape




Foilboard Spacer Blocks




INSTALLATION

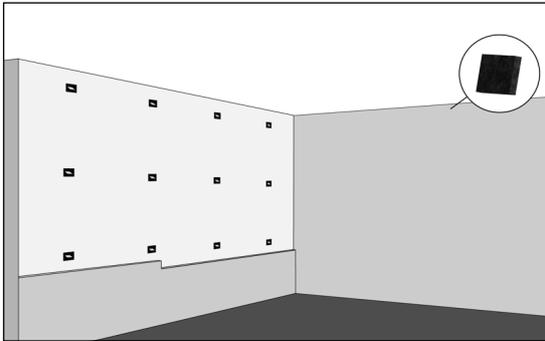


STEP 1 Install furring clips onto the wall. Attach Foilboard spacer blocks onto the clips by cutting the block and then fitting it to one side of the clip.

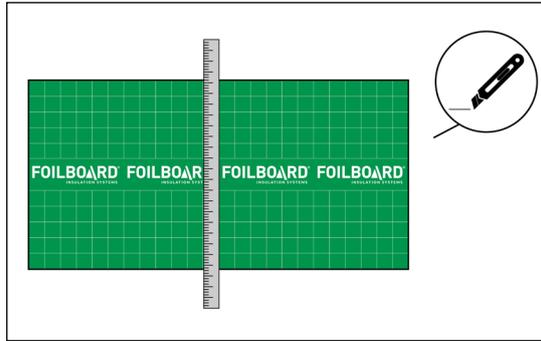


STEP 2 Use full size sheets where possible. For smaller sections, measure the required area and cut with a straight edge for precision.

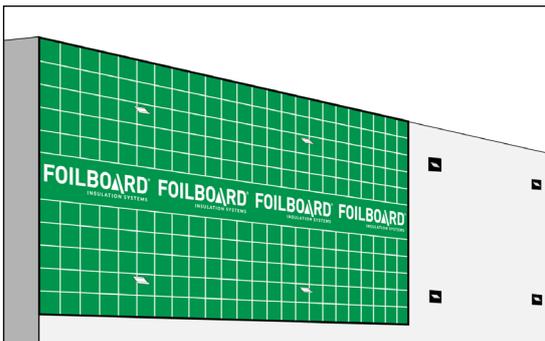

STEP 3 Apply gentle pressure on the panel over the furring clips to create visible marks, indicating their positions.

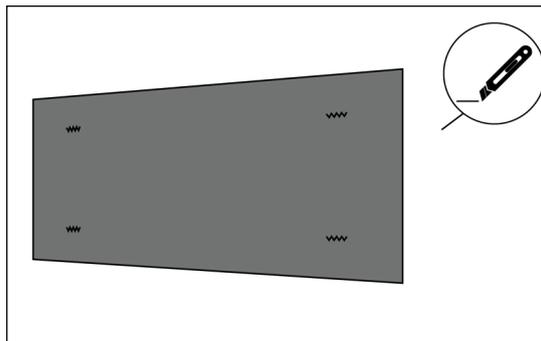

STEP 4 Cut a slot where each furring clip left a mark. Push the panel over the furring clips until they meet the Foilboard spacer blocks.

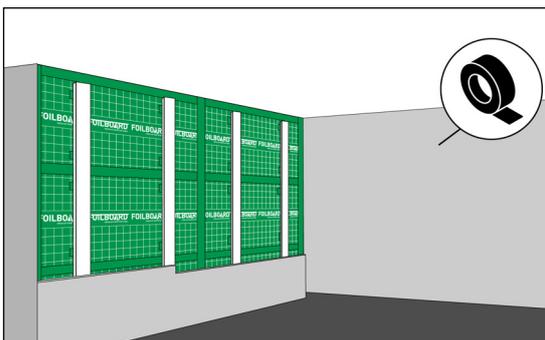

STEP 5 Lock panels into place with furring channels. Tape any joins or gaps using Foilboard green joining tape.

* Disclaimer: this installation method is a guide only.

PRO TIPS

- Start with using full panels in the largest areas, then fill in smaller areas with smaller off-cuts to minimise wastage.
- Start from the top of the build and work your way down.

INFORMATION LINE
1800 354 717

www.foilboard.com.au

