FOILBOARD FOILBOARD

The following steps outline the simplest installation method while ensuring the maximum thermal performance for your project. This guide demonstrates how Foilboard panels are installed, after the inner brick wall has been constructed, using the brick-ties to hold them in place inside the wall cavity.

ACCESSORIES






Foilboard Green Joining Tape




Blocks

INSTALLATION


Foilboard Insulation Panels contain aluminium foil which conduct electricity and can be conductive when coming into contact with electrical wiring. To avoid electrocution, care should be taken to ensure that this product does not come into contact or close proximity with electrical wiring during the installation or use. Please note that electrical cable and equipment, partially or completely surrounded with bulk thermal insulation, may overheat or fail. For more information or guidance on how to treat interactions betw wiring and insulation on your project please refer AS3999 and/or a licensed electrician.

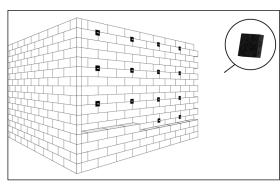


STEP 1 Install Foilboard spacer blocks by pushing a block onto each brick-tie as shown.

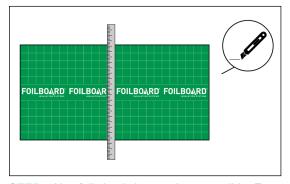


STEP 2 Use full sized sheets where possible. For smaller sections, measure the required area and cut with a straight edge for precision.

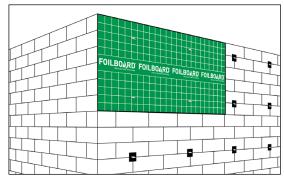

STEP 3 Gently press the Foilboard panel onto the brick-ties, so they leave a mark showing their position.

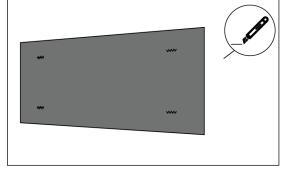

STEP 4 Cut a slot where each brick-tie marked the Foilboard panel. Then push the panel onto the brick ties until they meet the spacer blocks.

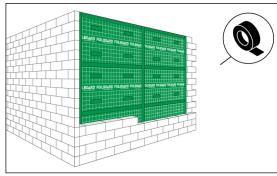

STEP 5 Tape any joins, exposed edges or gaps using Foilboard joining tape.

PRO TIPS

- Install Foilboard panels to the inner skin of the brickwork using the brick-ties. Once installed, outer skin of the brickwork may be finished.
- · Tape around the brick-ties to maximise thermal performance.
- Start with full panels in the largest areas, then fill in smaller areas with off-cuts to minimise wastage.
- Start from the top of the build and work your way down.

INFORMATION LINE 1800 354 717



www.foilboard.com.au

Disclaimer: This method is a guide only