

# FOILBOARD® INSULATION SYSTEMS

# INSTALLATION GUIDE

To achieve maximum thermal performance and to ensure fast and simple installation of Foilboard® GREEN rigid insulation panel for retrofit or new underfloor systems, Foilboard Australia recommends the following method

## What do you need?



Foilboard® Flexifast clips





Foilboard® Green OR Silver insulation joining tape



UNDERFLOOR (FLEXIFIT)

## How to Install?

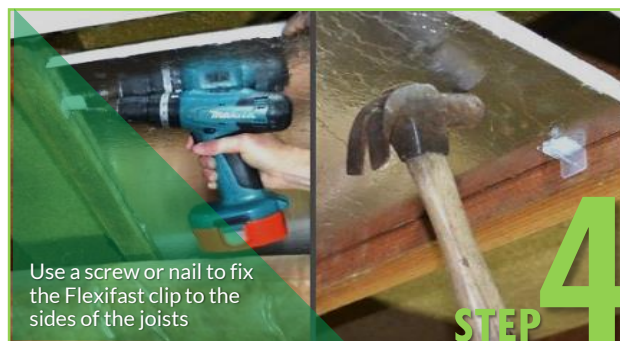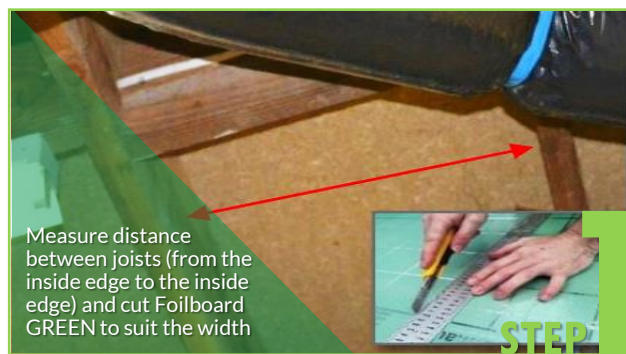

- ✔ Embedding the spikes of the Flexifast clip into the FR-EPS core secures the Foilboard® GREEN panel in position ensuring quick and easy installation
- ✔ To minimise wastage cut across the width of the panel making each cut panel 1200mm long
- ✔ You can use a neutral cure silicon to seal any minor gaps
- ✔ When marking out the Foilboard® GREEN panel roundup the measurement by 1-2mm, this will ensure a snug fit and allow for any slight variation in the joists

### TOP TIPS



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717  
www.foilboard.com.au