

# FOILBOARD® INSTALLATION GUIDE

INSULATION SYSTEMS


To achieve maximum thermal performance and to ensure the fast and simple installation of Foilboard® GREEN rigid insulation panel to underfloor systems, Foilboard Australia recommends the following method.

## What do you need?



Use Foilboard® Standard Fasteners for GREEN 10 and GREEN 15 OR Foilboard® Ultra Fasteners for GREEN 20 and GREEN 25 (Use Timber or Steel fasteners depending on application)

Foilboard® Green OR Silver joining tape

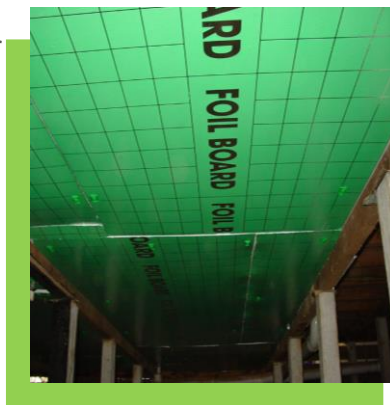

## How to Install?



Install the Foilboard GREEN panel against the bearer (Below joists)

STEP 1



Fix the panel using 3 Foilboard Fasteners per joist in between bearers.

STEP 2




Use full sheets of Foilboard GREEN panel in the areas that they fit. Then measuring and cutting the smaller areas

STEP 3



Join sheets together and continue along underfloor cutting around any services as required

STEP 4

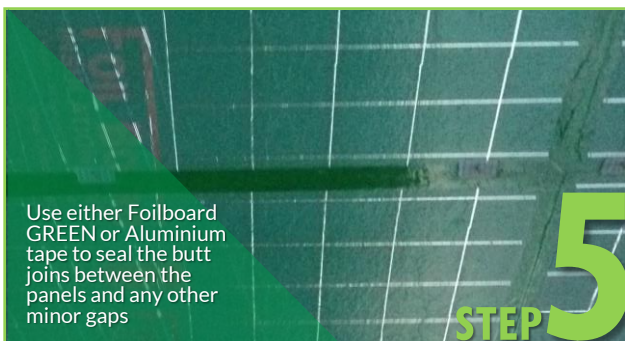

Use either Foilboard GREEN or Aluminium tape to seal the butt joints between the panels and any other minor gaps

STEP 5

- ✓ Install Foilboard® after the framing and plumbing have been completed prior to electrical services
- ✓ You can use Foilboard Green or Silver joining tape or a neutral cure silicon to seal any minor gaps
- ✓ The Foilboard® GREEN antiglare is there to protect you. Both the antiglare and silver foil reflect heat.

TOP TIPS



UNDERFLOOR (RETROFIT)



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717  
www.foilboard.com.au