

The following steps will demonstrate the easiest installation method while ensuring optimal thermal performance for your project.

This guide shows how Foilboard panels are installed to the stud-work with the appropriate Foilboard fasteners, before the brickwork has been completed.

ACCESSORIES




Foilboard Green Joining Tape

Foilboard Fasteners Green 10/15
OR Ultra Fasteners Green 20/25


*Timber or Steel depending on application




INSTALLATION

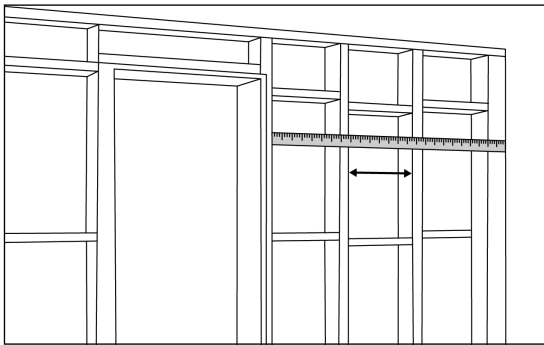


STEP 1 Measure the required area, then mark the Foilboard panel before cutting to size.

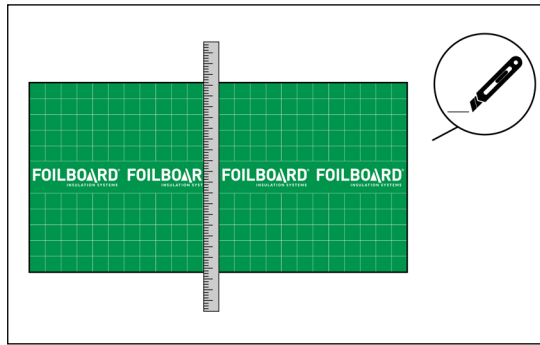


STEP 2 Use full size sheets where possible. For smaller sections, measure the required area and cut with a straight edge for precision.

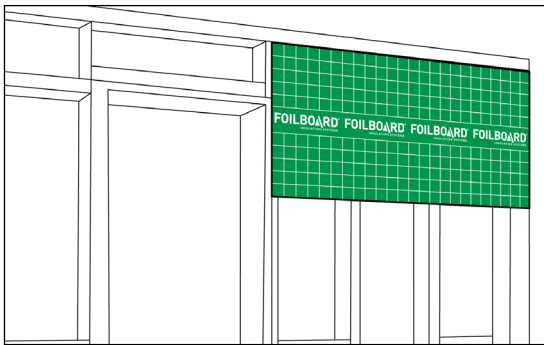

STEP 3 Position the Foilboard panel against the outside of the stud-work. Ensure the anti-glare side is facing out. Take care not to leave any gaps.

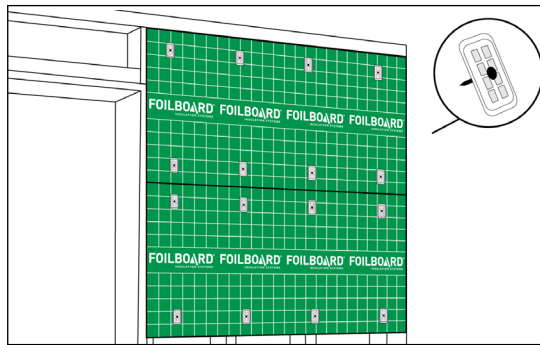

STEP 4 Fasten the Foilboard panel to the stud-work with Foilboard fasteners. Use 4-6 fasteners per square metre.

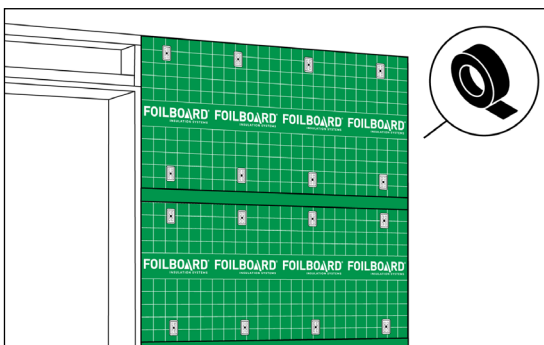

STEP 5 Tape any joins or gaps using Foilboard green joining tape.

PRO TIPS

- Install Foilboard once framing, windows and plumbing has been completed, but prior to electrical work.
- In windy conditions start on the windward side first.
- Start with full panels in the largest areas, then fill in smaller areas with smaller off-cuts to minimise wastage.
- Start from the top of the build and work your way down.

INFORMATION LINE
1800 354 717

www.foilboard.com.au

