

The following steps will demonstrate the easiest installation method while ensuring optimal thermal performance for your project.

In this guide, Foilboard panels are installed to the walls and roof using Foilboard spacer blocks.


ACCESSORIES




Foilboard Green **OR** Silver Joining Tape Foilboard Spacer Blocks




INSTALLATION

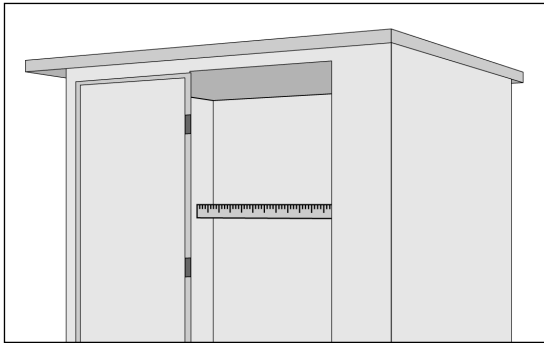


STEP 1 Measure the area to be insulated.

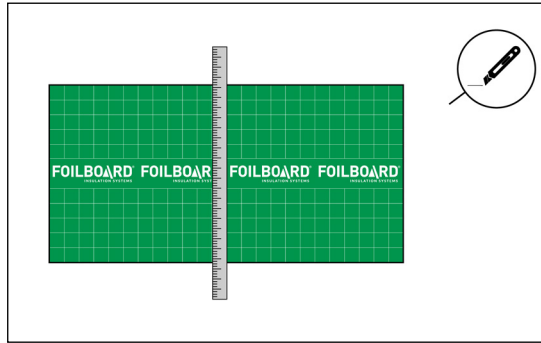


STEP 2 Use full size sheets where possible. For smaller sections, measure the required area and cut with a straight edge for precision.

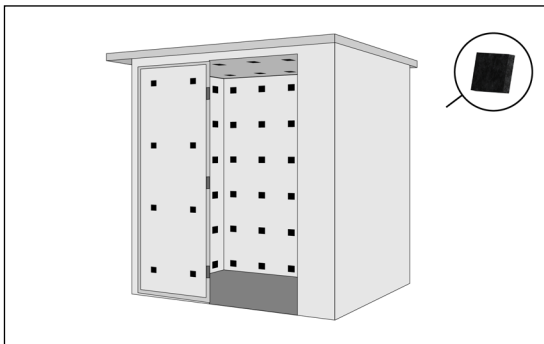

STEP 3 Clean walls and roof of your shed. Attach Foilboard spacer blocks to the metal using a high temperature water based silicone.

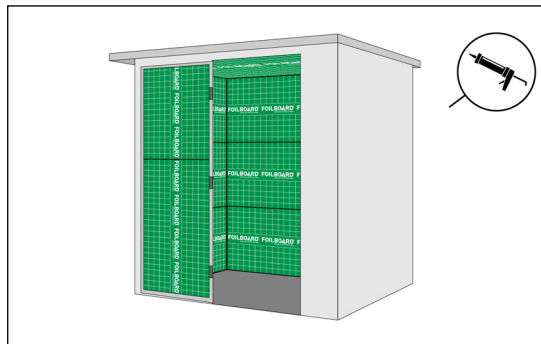

STEP 4 Attach the Foilboard panels to the wall by mounting onto the Foilboard spacer blocks using more high temperature water based silicone.

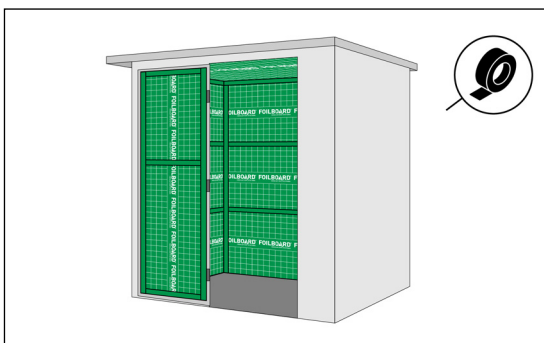

STEP 5 Tape any joints or gaps using Foilboard joining tape.

PRO TIPS

- Ensure your surfaces are cleaned, dry and dust free prior to installation.
- Use a good quality, high temperature water based roof or gutter silicone. Follow the instructions of the silicone.
- Install the Foilboard panels with the silver side facing out to retain brightness in the shed.
- Foilboard panel off cuts can be used in place of spacer blocks.
- Do not install under a skylight.

INFORMATION LINE
1800 354 717

www.foilboard.com.au

