

The following steps will demonstrate the easiest installation method while ensuring optimal thermal performance for your project.

In this guide, Foilboard panels are installed directly to the underside of concrete suspended slabs.




ACCESSORIES




Foilboard Green OR Silver Joining Tape

Foilboard Blank Plate
*Optional


INSTALLATION

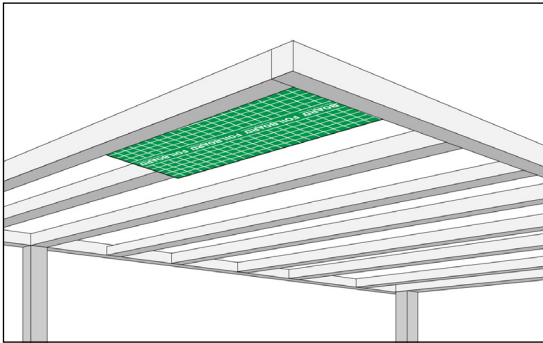


STEP 1 Position full sized Foilboard panel to underside of the concrete.

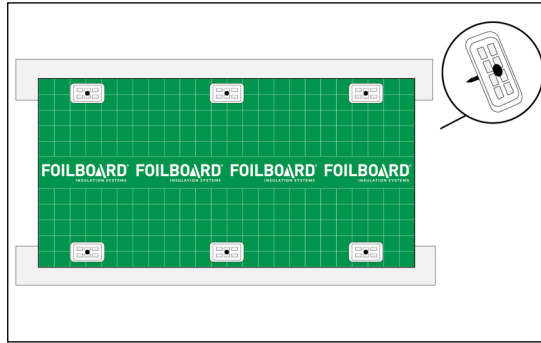


STEP 2 Fasten the panel into position using mechanical fasteners, such as concrete anchors or Foilboard blank screw plates with Nylon screws.

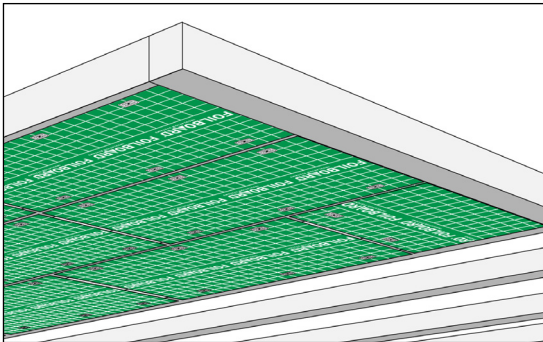

STEP 3 Cut Foilboard panels to fill in smaller areas as needed, making use of offcuts whenever possible to minimise wastage.

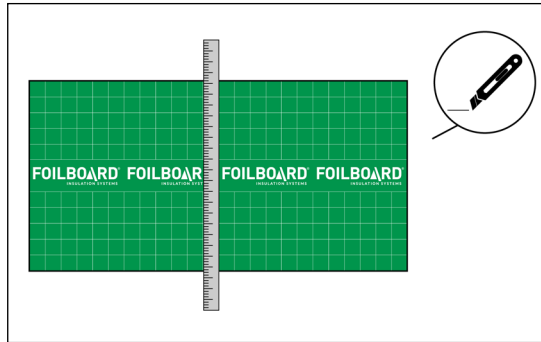

STEP 4 Measure the required area, then cut the Foilboard panel to size using a straight edge and a sharp knife for precision.

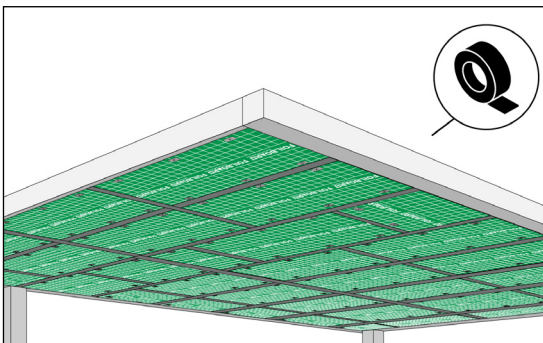

STEP 5 Tape any joints or gaps using Foilboard green joining tape to maximise thermal efficiency.

PRO TIPS

- Starting with areas that can accommodate the full sheets before moving on to smaller areas.
- Joints between panels don't need to line up with battens.
- Minor gaps can be sealed with a high temperature, water based silicon.

INFORMATION LINE
1800 354 717

www.foilboard.com.au

