

The following steps will show you the simplest installation method while ensuring the maximum thermal performance for your retrofitted project.

This guide shows how Foilboard panels can be retrofitted in existing floors or installing into new builds using Foilboard flexifast clips to install the panels between floor joists.




## ACCESSORIES




Foilboard Green OR Silver Joining Tape

Foilboard Flexifast Fastener


## INSTALLATION

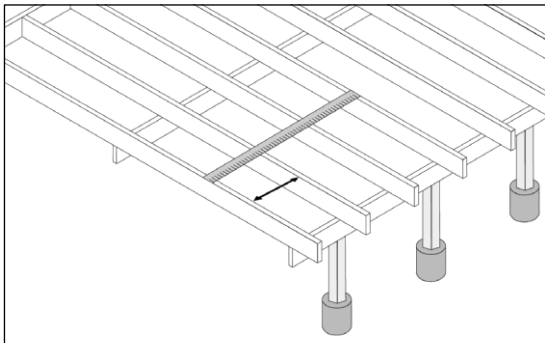


**STEP 1** Measure the required area between the joists and mark the Foilboard panel.

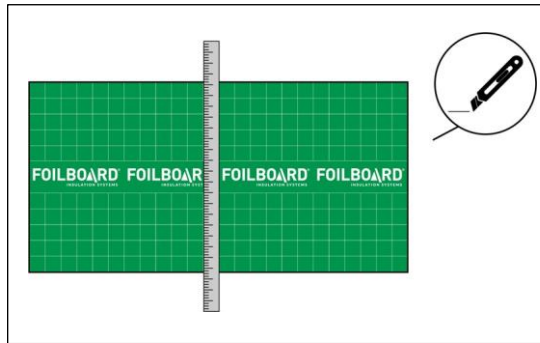


**STEP 2** Cut the Foilboard panel to size using a straight edge and a sharp knife.

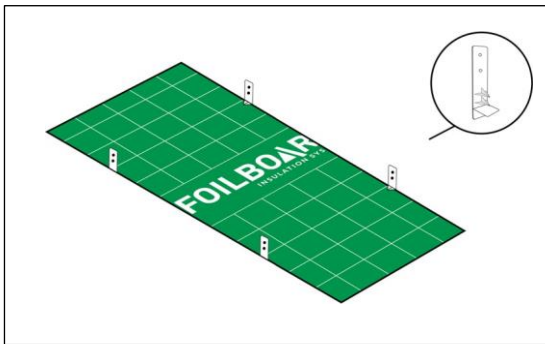

**STEP 3** Attach the Foilboard flexifast fasteners to the edges of the panel, 300mm from end and at 600mm intervals.

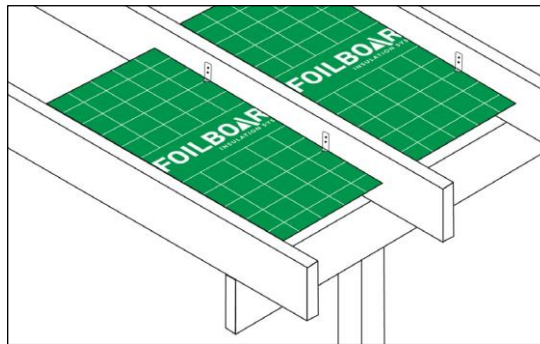

**STEP 4** Position the Foilboard panel between the joists and fix in place using the fasteners.

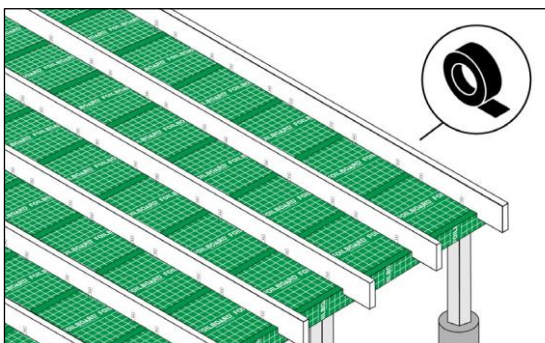

**STEP 5** Tape any joints, exposed edges or gaps using Foilboard silver or green joining tape, ensuring an enclosed reflective air space.

## PRO TIPS

- When marking out the Foilboard panels, add 2mm to each measurement, this will ensure a snug fit and allow for any slight variation between the joists.
- To minimise wastage cut across the width of the panel making each cut panel 1200mm long.
- Minor gaps can be sealed with a high temperature, water based silicon.
- Typically, in this application the Foilboard panel is installed with the anti-glare side facing downward. If specified otherwise please, follow the provided installation recommendations.

\* Disclaimer: this installation method is a guide only.

INFORMATION LINE  
1800 354 717

[www.foilboard.com.au](http://www.foilboard.com.au)

