


# FOILBOARD® INSULATION SYSTEMS

# INSTALLATION GUIDE


To achieve maximum thermal performance and to ensure fast and simple installation of Foilboard® GREEN rigid insulation panel to garage doors, Foilboard Australia recommends the following method.

## What do you need?

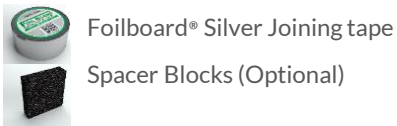

Foilboard® Silver Joining tape

Spacer Blocks (Optional)

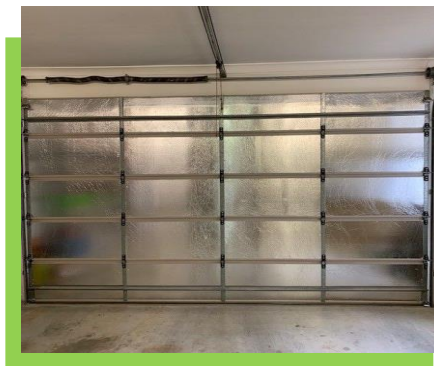


GARAGE DOOR

## How to Install?



Foilboard GREEN rigid insulation panel should be installed to the internal face of the garage door.

STEP 1

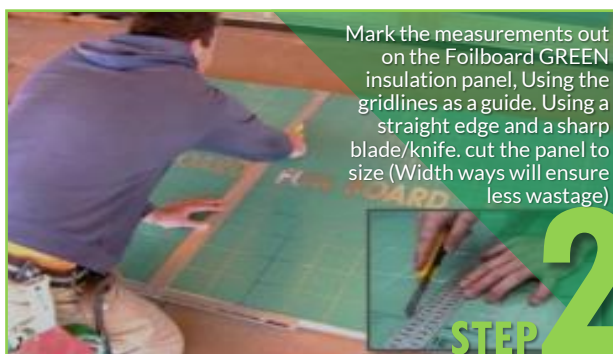

Mark the measurements out on the Foilboard GREEN insulation panel, Using the gridlines as a guide. Using a straight edge and a sharp blade/knife, cut the panel to size (Width ways will ensure less wastage)

STEP 2



Use Foilboard spacer blocks to maintain an airspace between the Foilboard and the garage door to increase insulation performance.

STEP 3



Position the Foilboard against the metal garage door tilt panel spacer blocks using suitable high temperature resistant adhesive/silicone. Foilboard should be butted hard up and/or inside of door framework where possible.

STEP 4



Tape any penetrations or joins with Foilboard Silver insulation tape, to minimise hot/cold air transfer. Foilboard comes in a range of thicknesses to suit any project

STEP 5

- ✓ Install the Foilboard® with the silver side facing out. This will retain brightness of the garage space.
- ✓ Fill in any remaining sections with smaller off cuts to help minimise wastage
- ✓ Using Foilboard® Spacer blocks to provide an air cavity greatly increases insulation performance

TOP TIPS



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717  
www.foilboard.com.au