



# FOILBOARD® INSULATION SYSTEMS

# INSTALLATION GUIDE

To achieve maximum thermal performance and to ensure a fast and simple installation of Foilboard® GREEN rigid insulation panel to double brick cavity systems, Foilboard Australia recommends the following method.

## What do you need?

-  Use Foilboard® foam spacer blocks to ensure correct positioning in a cavity wall
-  Foilboard® Green Joining tape


## How to Install?



DOUBLE BRICK (CAVITY)



Construct inner skin/face of brickwork including brick-ties as necessary and push the Foilboard spaces over each tie

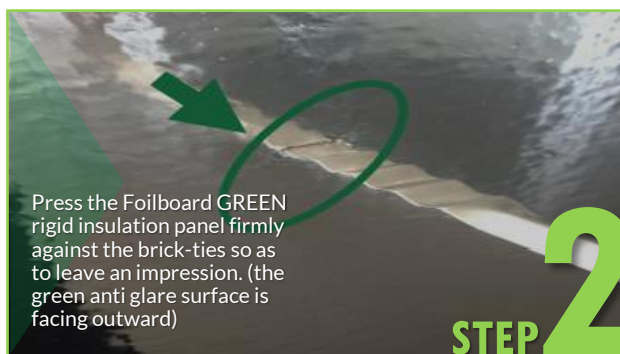

Press the Foilboard GREEN rigid insulation panel firmly against the brick-ties so as to leave an impression. (the green anti glare surface is facing outward)








Make small cut through the Foilboard GREEN rigid insulation panel where the brick-tie impressions have been made using a sharp blade



Slide the Foilboard GREEN panel over brick-ties and tape all joints.



Finish constructing the remaining external skin of brickwork.

-  Using a longer snap blade will aid in ensuring the slit goes through the panel properly
-  Start with areas that can use full sheets. This can save unnecessary cutting. For measuring and cutting use the Foilboard® gridlines as a guide
-  Fill in remaining sections with smaller off-cuts to help minimise wastage
-  Use foam or soft rubber roller over taped joints to promote optimal adhesion
-  Foilboard® recommends also taping around the brick-ties to minimise air leakage

## TOP TIPS



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717  
www.foilboard.com.au