




FOILBOARD® INSULATION SYSTEMS

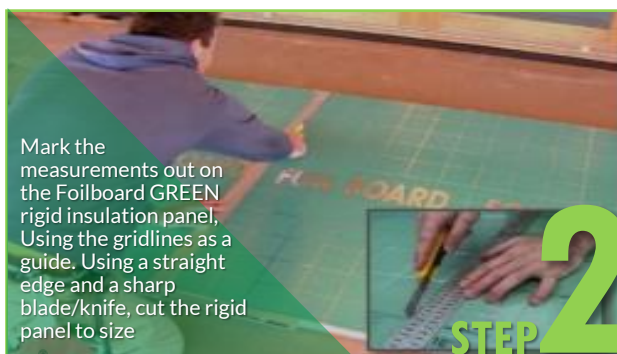
INSTALLATION GUIDE





To achieve maximum thermal performance and to ensure a fast and simple installation of Foilboard® GREEN rigid insulation panel to a shed/garage wall and/or roof, Foilboard Australia recommends the following method.

What do you need?

-  Use Foilboard® Ultra Fasteners for GREEN 20 and GREEN 25 (Use Timber or Steel fasteners depending on application)
-  Foilboard® Silver Joining tape
-  Spacer Blocks (Optional)

How to Install?



-  Foilboard® Panels don't need to join on a batten or purlin. Butt join and tape to ensure continuous insulation.
-  Install Foilboard® silver side as the finish to brighten your shed or garage space.
-  Place the fastener 50mm from the edge of the insulation panel to leave room for the tape.
-  Off cuts can be used as a spacer block to help minimise wastage

TOP TIPS



SHED / GARAGE



It's the smarter way to insulate

INFORMATION HOTLINE: 1800 354 717
www.foilboard.com.au